

# ATCA-736x SATA Module Quick Start Guide

P/N:6806800K38C (June 2014)

## 1 What's in the Box?

Make sure you receive all items of your shipment:

- ATCA-736x SATA Module
- Two M2x4 screws
- Printed *Safety Notes*



When installing or servicing the module or accessories, strictly observe the safety precautions in the *Safety Notes*. Otherwise, personal injury or property damage may occur.

## 2 Observe ESD-safe Measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect to the ESD connector at the front or the rear of the system.

## 3 Prepare the Installation Site

- For information on the environmental and power requirements, see the *ATCA-736x SATA Module Installation and Use* manual.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

## 4 Install the SATA Module

1. Remove the blade from the system.
2. If another accessory is installed in the PMEM/SATA extension slot, remove the accessory first, and then plug the SATA module in the slot so that its standoffs fit in the mounting holes on the blade.
3. Fasten the SATA module to the blade using the two screws that come with the SATA module.
4. Reinstall the blade into the system. The SATA module is detected automatically during the boot-up sequence.



## Finding More Information

For more information on the product, see the *ATCA-736x SATA Module Installation and Use* and other related documentation.

Visit our Web site <http://www.artesyn.com/computing>. Use SUPPORT>TECHNICAL DOCUMENTATION link to look for technical documentation.

## Technical Assistance

To request technical assistance, visit our Web site <http://www.artesyn.com>