

MVME4100ET

Quick Start Guide

P/N:6806800K78B (June 2014)

1 What's in the box?

Make sure you receive all items of your shipment:

- MVME4100ET board
- Printed *Safety Notes*



When installing or servicing the module or accessories, strictly observe the safety precautions in the *Safety Notes*. Otherwise, personal injury or property damage may occur.

2 Observe ESD-safe measures

Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.

3 Prepare the installation site

- For information on the environmental and power requirements, see the *MVME4100ET Installation and Use* manual.
- Remove all items from the box.

4 Install the board

1. Attach an ESD strap to your wrist.
2. Attach the other end of the ESD strap to an electrical ground.
The ESD strap must be secured to your wrist and to ground throughout the procedure.
3. Remove any filler panel that might fill that slot.
4. Install the top and bottom edge of the MVME4100ET into the guides of the chassis.
5. Ensure that the levers of the two injector/ejectors are in the outward position.
6. Slide the MVME4100ET into the chassis until you feel resistance.
7. Simultaneously move the injector/ejector levers in an inward direction.
8. Verify that the MVME4100ET is properly seated.
9. Secure the board to the chassis using the two screws located adjacent to the injector/ejector levers.
10. Connect the appropriate cables to the MVME4100ET.



4

Install the board (Contd)

When the MVME4100ET is installed in the chassis, you are ready to connect peripherals and apply power to the board.

Finding more information

For more information on the product, see the *MVME4100ET Installation and Use* and other related documentation.

Visit our Web site <http://www.artesyn.com/computing>. Use SUPPORT>TECHNICAL DOCUMENTATION link to look for technical documentation.

Technical Assistance

To request technical assistance, visit our Web site <http://www.artesyn.com>.