

RTM-ATCA-7360-HDDKIT

P/N:6806800L49B (June 2014)

1 What's in the Box?

Make sure you receive all items of your shipment:

- RTM-ATCA-7360-HDDKIT



When installing or servicing the module or accessories, strictly observe the safety precautions in the *Safety Notes*. Otherwise, personal injury or property damage may occur.

2 Observe ESD-safe Measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect to the ESD connector at the front or the rear of the system.

3 Prepare the Installation Site

- For information on the environmental and power requirements, see the *RTM-ATCA-7360 Installation and Use manual*.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

4 Mount the HDD to the kit

The HDD kit comes with all the HDD screws and standoffs loosely fixed on the PCB.

1. Attach the HDD connectors to the RTM-ATCA-7360-HDDKIT connectors.
2. Secure the HDD by pressing the screws.

5 Install the Hard Disk Module to the RTM

1. Remove the HDD slot cover of the RTM by loosening and removing the screws that attach the plate to the RTM.
2. With the HDD slot cover removed, align the hard disk module to the guiding rails of the hard disk slot.
3. Insert the hard disk module into the slot until it is fully inserted.
4. Tighten the two thumb screws of the hard disk module.
5. Take all necessary steps in your operating system to make the hard disk operable (the steps depend on the OS you are using).



Finding more information

For more information on the product, see the *RTM-ATCA-7360-HDDKIT Installation and Use* and other related documentation.

Visit our Web site <http://www.artesyn.com/computing>. Use SUPPORT>TECHNICAL DOCUMENTATION link to look for technical documentation.

Technical Assistance

To request technical assistance, visit our Web site <http://www.artesyn.com>