

RTM-ATCA-F140 Quick Start Guide

P/N:6806800P18B (May 2014)

1 What's in the box?

Make sure you receive all items of your shipment:

- RTM-ATCA-F140 blade
- Other items that were ordered
- Printed *Safety Notes*



When installing or servicing the module or accessories, strictly observe the safety precautions in the Safety Notes. Otherwise, personal injury or property damage may occur.

2 Observe ESD-safe measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect to the ESD connector at the front or the rear of the system.

3 Prepare the installation site

- For information on the environmental and power requirements, see the *RTM-ATCA-F140 Installation and Use* manual.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

4 Install the RTM

Notes: The following procedure assumes that your system is powered. If your system is unpowered, you can disregard the blue LED and thus skip the respective step.

1. Visually inspect the RTM and zone 3 connectors on the front blade for damage or bent pins before attempting to insert a board. If any connector damage or pin damage is observed, stop before inserting the RTM and send the damaged item through proper repair channels.

4 Install the RTM (cont.)

2. If the corresponding front blade is already installed, perform the following steps. Otherwise skip to step 3.

- On the front blade, verify the face plate screws that secure the blade to the shelf are tight.
- Deactivate the front blade. Unlatch the lower handle by squeezing the lever and the latch together and turning the handle outward only enough to unlatch the handle from the face plate. Do not rotate the handle fully outward.
- When the blue LED on the front blade is permanently illuminated, proceed to the next step.

3. Ensure that the top and bottom ejector handles on the RTM are in the outward position by squeezing the lever and the latch together.

4. Insert the RTM into the shelf by placing the top and bottom edges of the RTM in the card guides of the shelf. Ensure that the guiding module of the front blade and RTM are aligned properly.

5. Apply equal and steady pressure to the RTM to carefully slide the RTM into the shelf until you feel resistance. Continue to gently push the RTM until the connectors engage.



4 Install the RTM (cont.)

6. Squeeze the lever and the latch together and hook the lower and the upper handle into the shelf rail recesses.

7. Fully insert the blade and lock it to the shelf by squeezing the lever and the latch together and turning the handles towards the face plate.

8. Tighten the face plate screws which secure the RTM to the shelf.

9. If the front blade has already been installed (as in step 2), activate the front blade by squeezing its lower lever and latch together and press it back into the face plate.

10. If the front blade has not been installed, proceed with the installation instructions in the front blade installation and use manual.

Note: Make sure that the handles of both the RTM and the front blade are closed in order to power up the blade and RTM payload.

When the blue LED of the RTM is switched OFF and the green LED "OK" is switched ON, indicates that the payload of the RTM has been powered up and that the RTM is active.

11. Connect cables to the face plate, if applicable.

5 Removing the RTM

The following procedure assumes that your system is powered. If your system is unpowered, you can disregard the blue LED and skip the respective step.

1. On the front blade, unlatch the lower handle by squeezing the lever and the latch together and turning the handle outward only enough to unlatch the handle from the face plate. Do not rotate the handle fully outward.

2. Wait until the front board blue LED is illuminated permanently.

Note: If the LED continues to blink, a possible reason may be that upper layer software rejects the blade extraction request.

3. Remove face plate cables, if applicable.

4. Unfasten the screws of the RTM face plate until the RTM is detached from the shelf.

5. Unlatch the RTM upper and lower handles and rotate fully outward.

6. Remove the blade from the shelf.

Finding more information

For more information on the product, see the *RTM-ATCA-F140 Installation and Use* and other related documentation.

Visit our Web site

<http://www.artesyn.com>

Use the Product Search link to look for technical documentation.

Technical Assistance

To request technical assistance, visit our Web site <http://www.artesyn.com/computing>.