

# ATCA-7470-ACCEL-MOD

P/N:6806800R11B (August 2014)

## 1 What's in the box?

Make sure you receive all items of your shipment:

- One ATCA-7470 accelerator module
- Three M2.5 x 8mm screws
- One printed copy of Quick Start Guide
- One printed copy of Safety Notes Summary



When installing or servicing the module or accessories, strictly observe the safety precautions in the Safety Notes. Otherwise, personal injury or property damage may occur.

## 2 Observe ESD-safe measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect to the ESD connector at the front or the rear of the system.

## 3 Prepare the installation site

- For information on the environmental and power requirements, see the *ATCA-7470 Installation and Use* manual.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

## 4 Install the Accelerator module

1. Remove the blade from the system.
2. Insert the Accelerator module in the socket so that the module's stand-offs fit in the blade's mounting holes.
3. Fasten the Accelerator module to the blade using the three M2.5x 8mm screws.
4. Reinstall the blade into the system.

### Finding more information

For more information on the product, see the *ATCA-7470 Installation and Use* manual and other related documentation.

Visit our Web site <http://www.artesyn.com/computing/>.

Use SUPPORT>TECHNICAL DOCUMENTATION link to look for technical documentation.

### Technical Assistance

To request technical assistance, visit our Web site <http://www.artesyn.com/>.