

COMX-P40x0 ENP2 Quick Start Guide

P/N:6806800R98B (July 2014)

1 What's in the box?

Make sure you receive all items of your shipment:

- COMX-P40x0 ENP2
- Printed *Safety Notes*



When installing or servicing the module or accessories, strictly observe the safety precautions in the *Safety Notes*. Otherwise, personal injury or property damage may occur.

2 Observe ESD-safe Measures

- Use either a properly grounded ESD wrist strap or make sure that you are working in an ESD-safe environment.
- Connect to the ESD connector at the front or the rear of the system.

3 Prepare the installation site

- For information on the environmental and power requirements, see the *COMX-P40x0 ENP2 Installation and Use* manual.
- Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

4 Install the COM Express module

1. Line up the board-to-board connector of the module assembly with the board-to-board connector of the carrier board.
2. Make sure that the interconnectors are properly aligned and that the five standoffs on the module have contact with the top of the carrier board.
3. From the bottom side of the carrier board, locate the screw holes on module and carrier board.
4. Use the screws to fasten the module to the carrier board.
Note: This installation procedure is only for reference. Assemble the heat sink and the module based on your own thermal solution.

Finding more information

For more information on the product, see the *COMX-P40x0 ENP2 Installation and Use* and other related documentation.

Visit our Web site <http://www.artesyn.com/computing>. Use SUPPORT>TECHNICAL DOCUMENTATION link to look for technical documentation.

Technical Assistance

To request technical assistance, visit our Web site <http://www.artesyn.com>