

ATCA-7540 Quick Start Guide

P/N: 6806871A02A (September 2018)

1 Box contents

Make sure you receive all items of your shipment:

- One ATCA-7540 blade
- One printed copy of *Quick Start Guide* (this document)
- One printed copy of *Safety Notes Summary*
- Any optional items ordered



When installing or servicing the system or accessories, strictly observe the safety precautions in the *Safety Notes Summary*. Ignoring these instructions can void the system warranty and cause personal injury or property damage.

2 ESD



Wrist Strap

Electrostatic discharge and incorrect installation or removal of the product can damage circuit or shorten its life.

Use a properly grounded ESD wrist strap or work in an ESD-safe environment.

Connect to the ESD connector at the front or the rear of the system.

3 Site preparation

Prior to installation, prepare your site. For information on the environmental and power requirements, see the *ATCA-7540 Installation and Use* manual.

Operating temperatures refer to the temperature of the air circulating around the blade and not to the actual component temperature.

4 Install the DIMM

NOTE: Some blade variants come with the DIMM already installed. For thermal safety concerns, no 4-rank DIMMs or stacked DIMMs are allowed. At least one DDR4 VLP RDIMM must be installed in a socket labeled DIMM A through DIMM F, see the marking on the outside edge of the blade. Installing RDIMMs in the remaining sockets is optional.

For a list of tested memory modules, refer to the *ATCA-7540 Installation and Use* manual.

1. Open the locks of the memory module socket.
2. Orient the memory module to the correct key position of the socket.
3. Press the memory module carefully into the socket. As soon as the memory module is fully inserted, the locks close automatically.
4. If necessary, repeat steps 1-3 to install additional memory modules.
5. Install the blade into the system (see Step 6).

5 Install the M.2 NVME SSD module

Some blade variants come with up to two M.2 NVME SSD modules already installed; the blade can be installed directly into the system (see Step 6).

Some blade variants do not have M.2 NVME SSD modules installed. If SSD modules are needed, please refer to the [SSD Module and Hardware Kit NVME-M.2-1TB Quick Start Guide](#) (P/N 6806868A01) for installation instructions. Once installed, proceed to Step 6.

6 Install the blade

The following procedure assumes that the system is powered. If it is not powered, disregard the blue LED information below and skip its respective step(s).

1. Prior to installing the blade into the slot, slide the top and bottom latches into the handle release position and pull the handles outward to unlatch the handles from the faceplate. Do not pull the handles fully outward.
2. Insert the blade into the shelf by aligning the top and bottom edges of the blade in the card guides of the shelf.
3. Apply equal and steady pressure to the blade to carefully slide the blade into the shelf until you feel resistance. Continue to push the blade gently until the blade connectors engage.
4. Fully insert the blade and push the handles towards the faceplate. The latches automatically slide inwards and lock the handles.
NOTE: If the shelf is powered, the blue LED (H/S) illuminates as soon as the blade is connected to the backplane power pins. When the blade is completely installed, the blue LED starts to blink. This indicates that the blade has signified its presence to the shelf management controller.
5. Wait until the blue LED is switched off and then fasten the faceplate screws to secure the blade to the shelf. Torque the faceplate screws to 0.40 N-m.
NOTE: When the blue LED is switched off and the green LED (IS) is switched on, this indicates that the payload has been powered up and the blade is active.
6. Connect cables to the faceplate, if applicable. Refer to the *ATCA-7540 Installation and Use Manual*.

NOTE: If an RTM is connected to the ATCA-7540 blade, make sure that the handles of both the RTM and the ATCA-7540 blade are closed in order to power up the blade's payload.



ATCA-7540 Quick Start Guide

Technical assistance

For technical assistance, visit our web site:
<http://crcportal.artesyn.com/>

Check for any product damage or shortages and report these to our Contact Center at: RMAsupport.ec@artesyn.com

Get more information

For more information on this product, see the *ATCA-7540 Installation and Use* guide and other related documentation on our web site.



Go to <http://www.artesyn.com/computing/search/documents> for technical documentation.

Artesyn Embedded Technologies, Artesyn and the Artesyn Embedded Technologies logo are trademarks and service marks of Artesyn Embedded Technologies, Inc. All other names and logos referred to are trade names, trademarks, or registered trademarks of their respective owners. © 2018 Artesyn Embedded Technologies, Inc. All rights reserved. For full legal terms and conditions, please visit www.artesyn.com/legal.